


Wiring Diagram Early Type 912

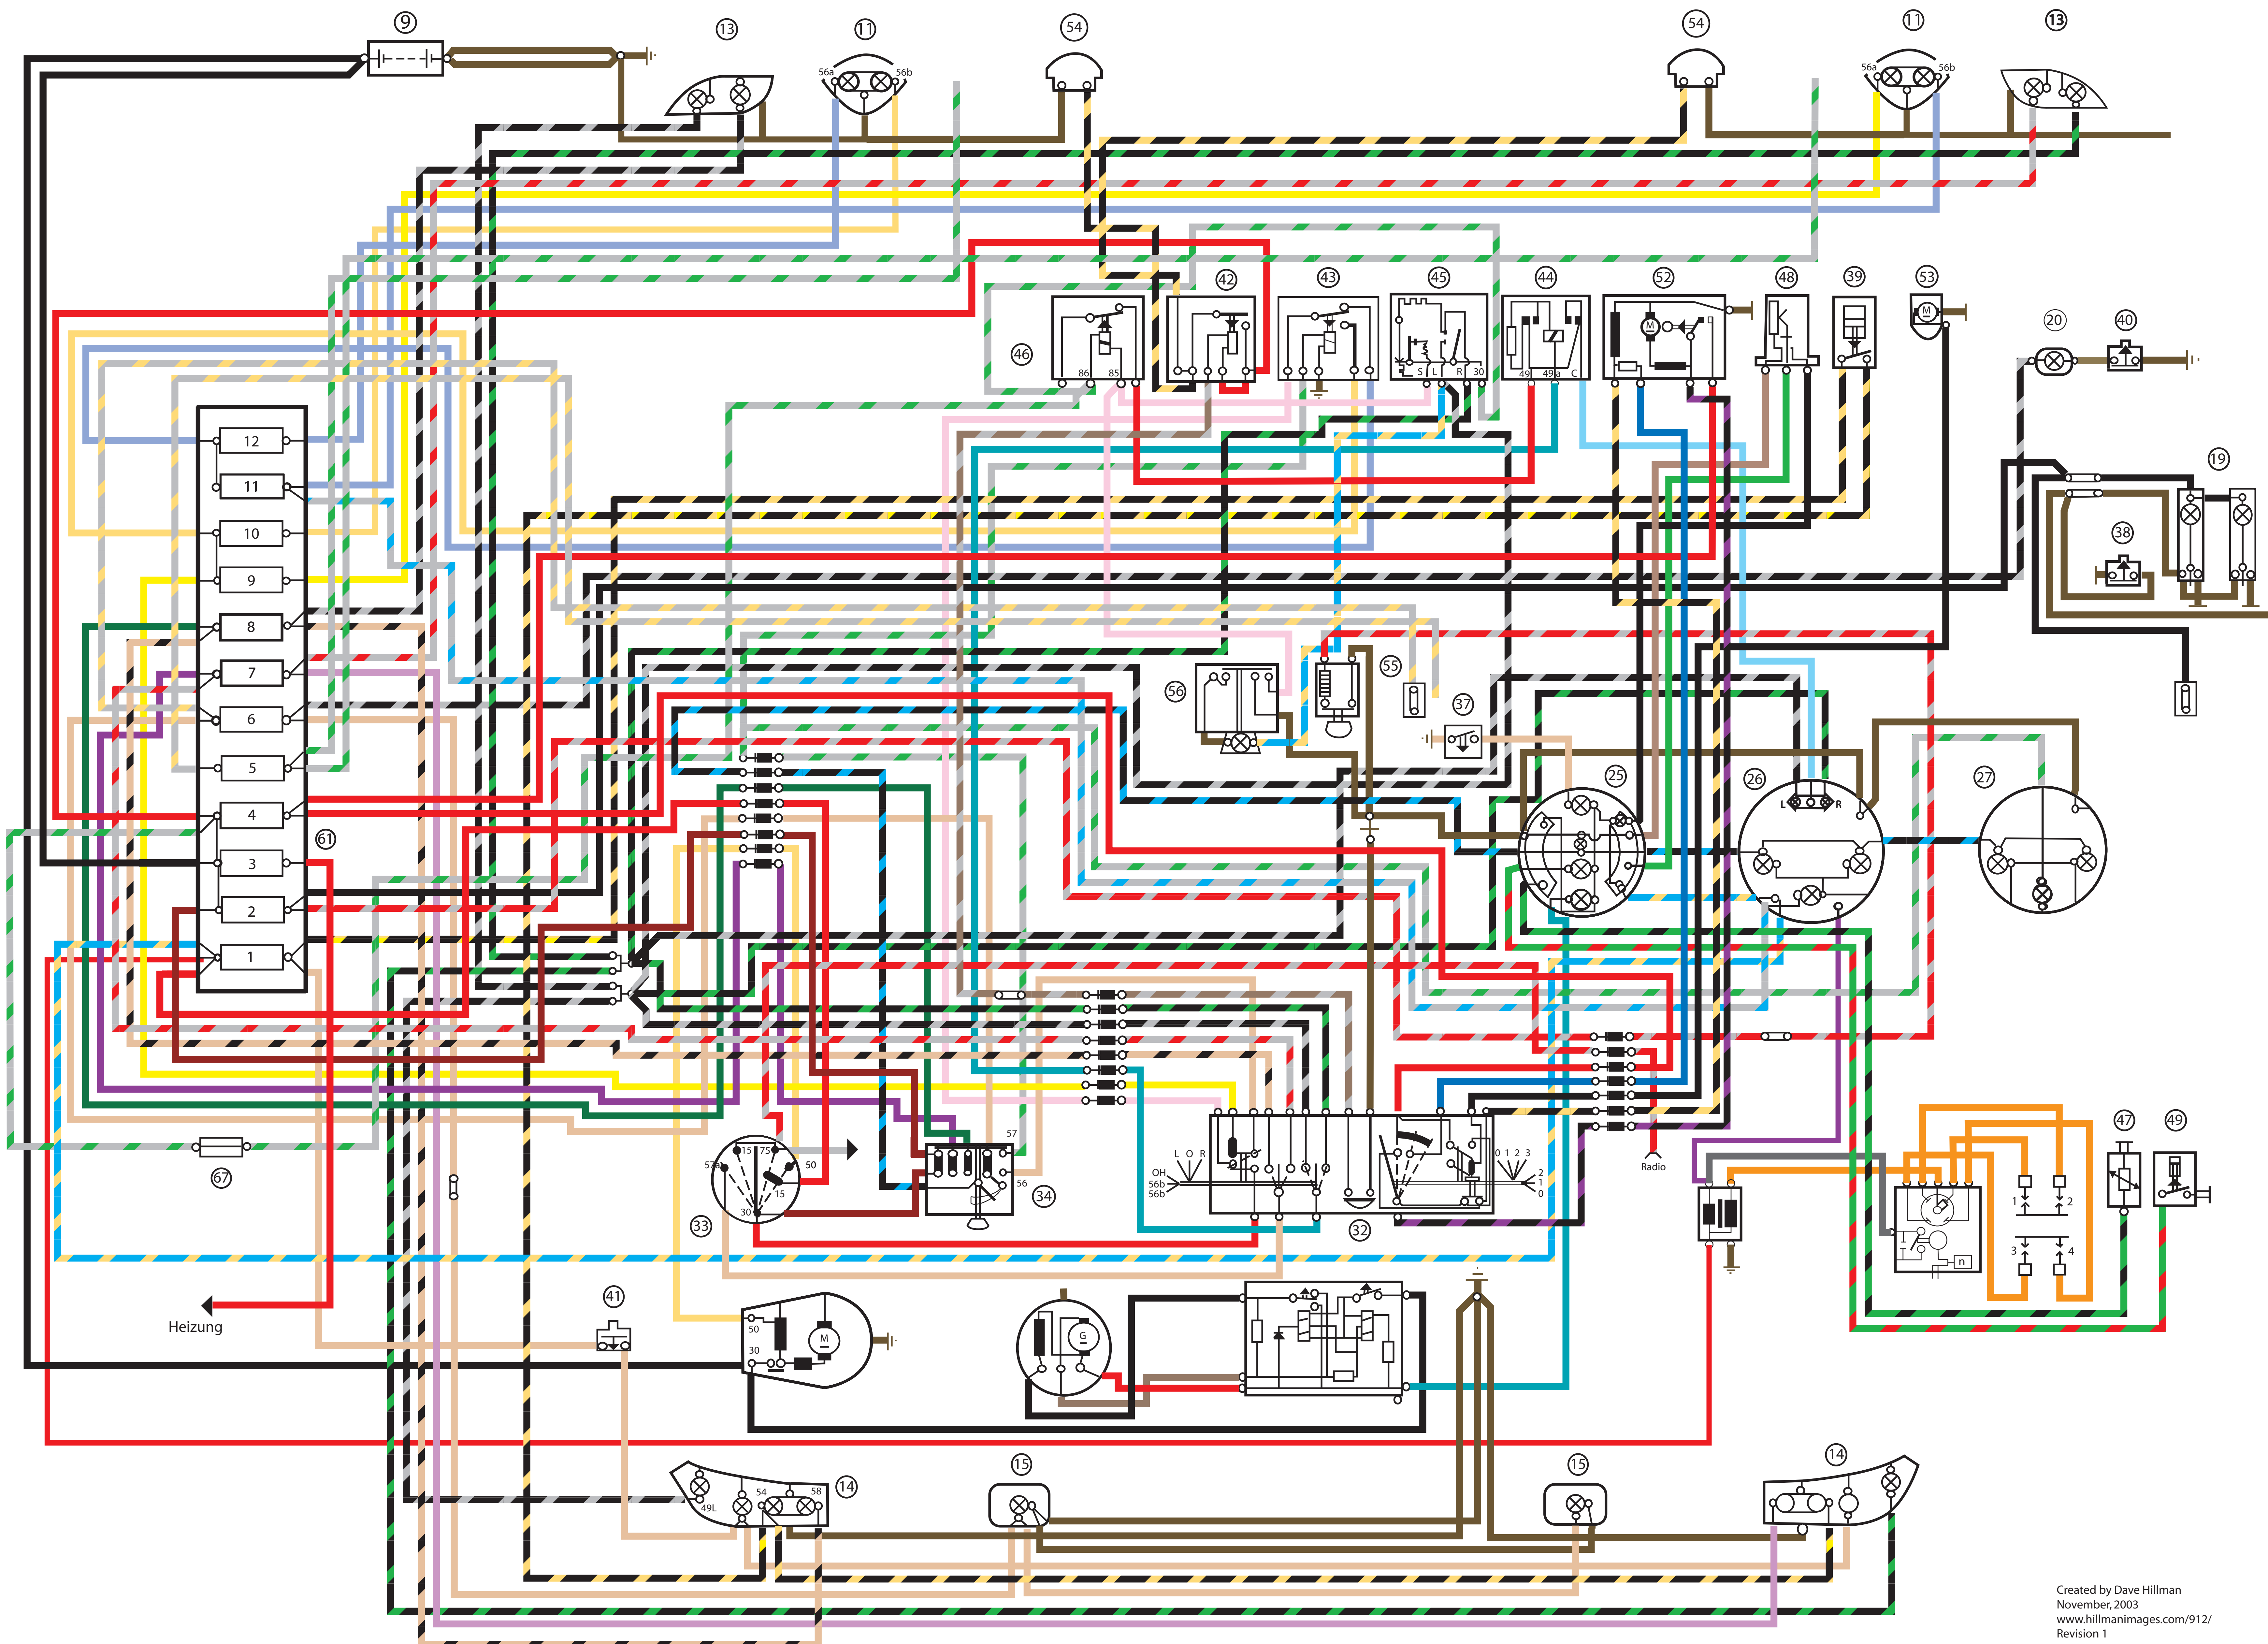

Legend

- ① starter
- ② generator
- ③ regulator
- ④ distributor
- ⑤ ignition coil
- ⑥ spark plugs
- ⑨ battery
- ⑪ headlight
- ⑬ parking and turn signal light
- ⑭ tail, stop, turn signal and backup light
- ⑮ license plate light
- ⑰ interior light
- ⑳ luggage compartment light
- ㉕ large combination instrument
- ㉖ transistorized tachometer
- ㉗ speedometer
- ㉚ combined switch for turn signal, low beam, headlight signal, wiper, washer and horn button
- ㉛ ignition switch
- ㉜ main light switch
- ㉟ hand brake indicator light switch
- ㊱ door contact switch
- ㊲ stop light switch
- ㊳ luggage compartment light switch
- ㊴ back-up light switch
- ㊵ horn relay
- ㊶ by-pass relay for high beam signal
- ㊷ turn signal flasher
- ㊸ warning signal flasher
- ㊹ warning signal relay
- ㊺ oil temperature sending unit
- ㊻ fuel tank sending unit
- ㊼ oil pressure sending unit
- ㊽ wiper motor
- ㊾ washer pump
- ㊿ horn
- ⓫ cigarette lighter
- ⓬ warning signal switch
- ⓭ fuse box

⓯ warning signal fuse with holder

Fuses

- 1 stop, turn signal and back-up light
- 2 interior light, cigarette lighter
- 3 supplementary heater (option)
- 4 wiper and washer
- 5 fog lamps (option)
- 6 license plate and luggage compartment
- 7 parking light, right
- 8 parking light, left
- 9 low beam, right
- 10 low beam, left
- 11 high beam, right, indicator light
- 12 high beam, left

Created by Dave Hillman
November, 2003
www.hillmanimages.com/912/
Revision 1